




Use AirPrint to print from your iPhone, iPad, or iPod touch


Learn how to print from your iPhone, iPad, or iPod touch to an AirPrint-enabled printer.

Before you begin

- Confirm that **your printer supports AirPrint**.
- Make sure that your iOS device and your printer are connected to the same Wi-Fi network and that you're within range.

Print with AirPrint

1. Open the app that you want to print from.
2. To find the print option, tap the app's share icon —  or  — or tap **...**.
3. Tap  or Print. If you can't find the print option, check the app's User Guide or Help section. Not all apps support AirPrint.
4. Tap Select Printer and choose an **AirPrint-enabled printer**.
5. Choose the number of copies or other options, like which pages you want to print.
6. Tap Print in the upper-right corner.

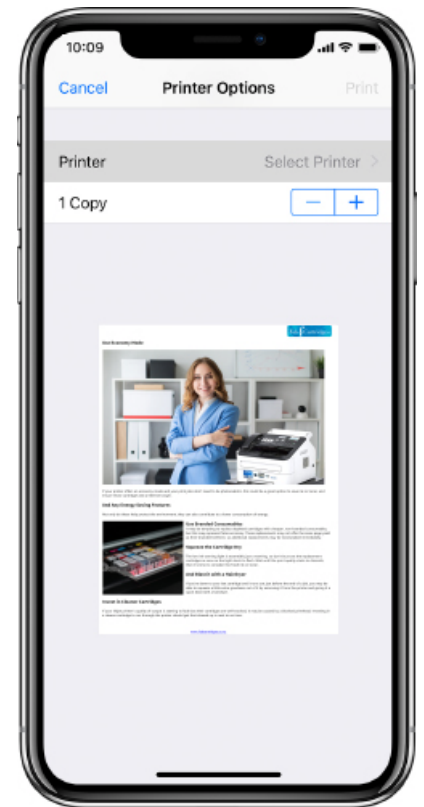

View or cancel your print job


While printing, you can view your print jobs or cancel them through the App Switcher.

View a print job



To view a print job, **open the App Switcher**, then tap Print Center.

Cancel a print job

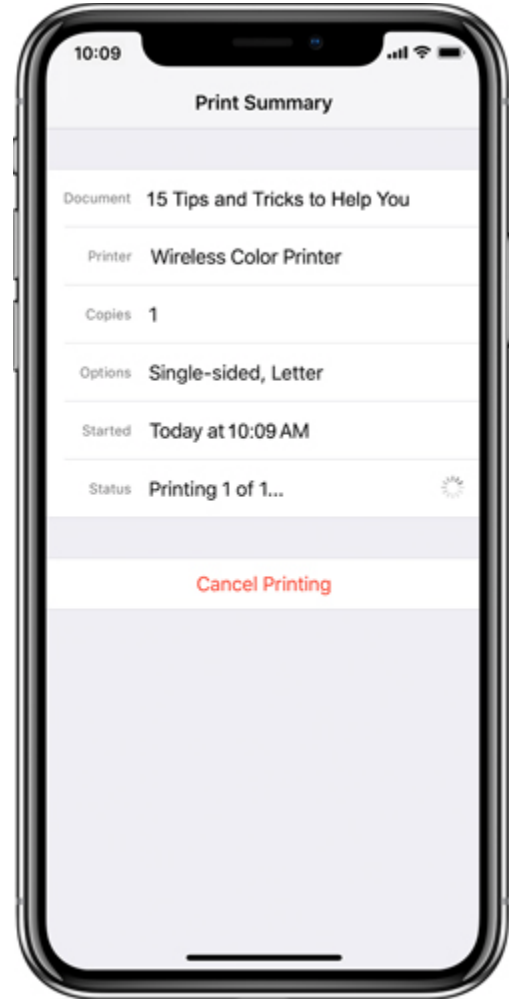

To cancel a print job, **open the App Switcher**, tap Print Center, then tap **Cancel Printing**.

5% OFF ANY PURCHASE

USE CODE **BC5** TO RECEIVE **5%** OFF
YOUR FIRST PURCHASE

